

RAVENHILL STUDIO

2122 Cypress Ave, Los Angeles, CA 90065
323.977.8532, contact@ravenhillstudio.com

We recommend that a professional electrician install our Peek Arm Sconce Fixture. Please share this guide with them and ensure they read the instructions completely before beginning assembly.

Your Peek Arm Sconce Fixture comes packaged in (3) individual parts and packets:

(1) Peek Arm Sconce Fixture

(1) Misc Contents Envelope

(1) G16.5 Lightbulb

Wire Nuts (2)
Canopy Mounting Screws (2)


(4.5 Canopy Only)
Junction Box Screws (2)
Universal Plate

Included with your Peek Arm Sconce Fixture is one G16.5 LED Lightbulb.

The Lightbulb is JA8 certified and has a 15,000-hour lifetime.

60W Max

Your Peek Arm Sconce Fixture is vulnerable to scratching and staining if care is not taken. Before installing or adjusting your fixture, it is highly recommended that you wear gloves.

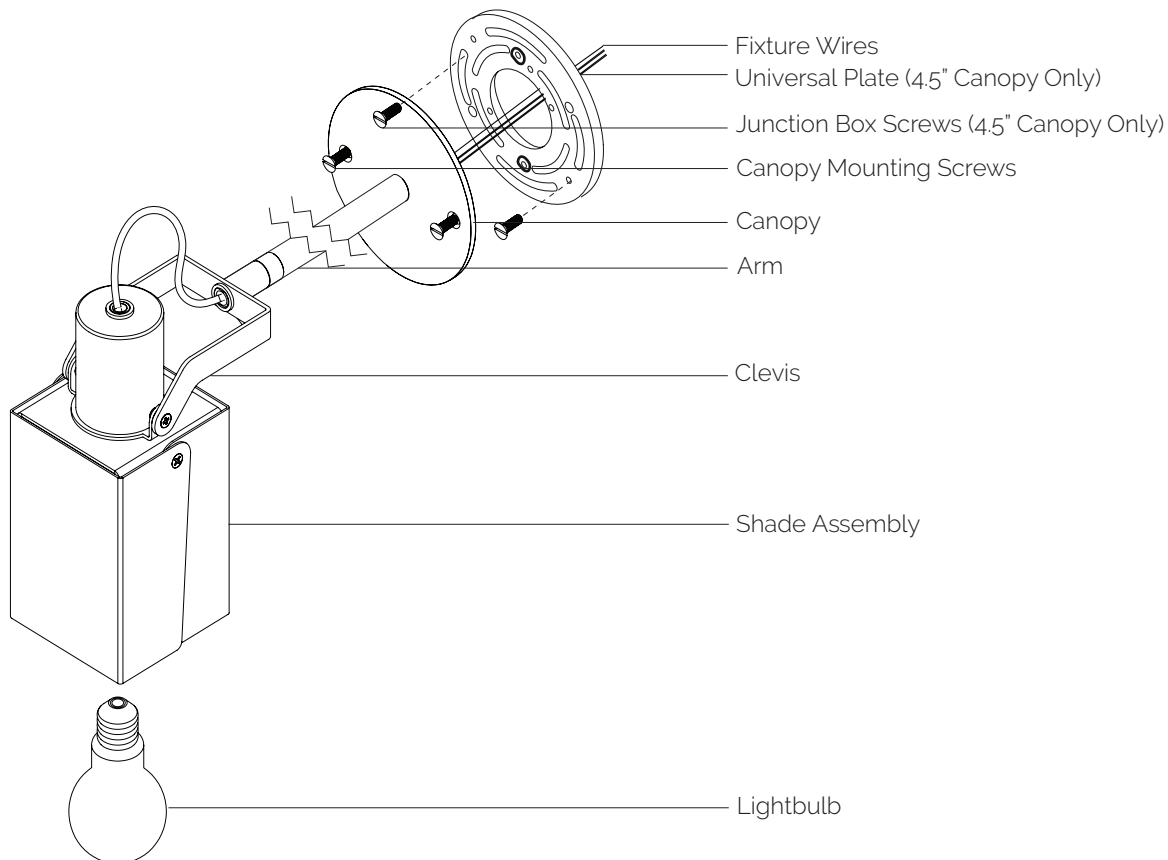

CAUTION: Before starting, turn off power at main circuit power.

1. Unpack your box and open the miscellaneous contents envelope.
2. If installing a 3.5" Canopy, skip to Step # 5.
3. Locate the 2 holes circled in red on the Universal Plate. These are for the Canopy Mounting Screws only and should be oriented to align to the room or existing fixtures.
4. Once desired orientation of the Universal Plate is confirmed, use the provided Junction Box Screws to secure the Universal Plate to the junction box through any of the unmarked holes or slots.
5. Bring the Canopy to the wall and connect the Fixture Wires to the junction box power using Wire Nuts.
6. Use the provided Canopy Mounting Screws to attach the Canopy. For a 3.5" Canopy, connect directly to the junction box. For a 4.5" Canopy, attach to the marked holes on the Universal Plate. Screw in the Lightbulb, turn on and enjoy!

NOTES / TROUBLESHOOTING

The mounting surface must be flat and level. The arm is mounted perpendicular to the canopy, therefore any wall irregularities or gaps behind the canopy may cause the fixture to appear misaligned.

Use a microfiber cloth to clean dust and dirt particles from your Peek fixture.

Rotate the shade assembly clockwise or counterclockwise to achieve the desired orientation. Shades can be opened or closed to control light output.

The swivel allows for up to 350 degrees of rotation and the clevis provides 180 degrees of vertical adjustment.

It is highly recommended to clean your hands (and consider wearing gloves) before installing or adjusting your Peek fixture.

Use Renaissance Wax to remove tarnish on waxed brass and nickel colorways only.

A phillips head screwdriver can be used to tighten the shades and clevis needed.