

RAVENHILL STUDIO

2122 Cypress Ave, Los Angeles, CA 90065
323.977.8532, contact@ravenhillstudio.com

We recommend installation of our Grain Drum 14 Sconce by a professional electrician. Turn off electrical power before beginning installation and use caution while installing.

Your Grain Drum 14 Sconce assembly consists of (15) individual parts:


- | | |
|--------------------|---------------------------------|
| (1) Shade Assembly | (1) Bracket/Wall Plate Assembly |
| (1) Reflector | (1) Strain Relief |
| (1) Finish Nut | (1) Cord grip |
| (1) Rod/Yoke | (3) Wire Nuts |
| (3) Light Bulbs | (2) Mounting Screws |

Included with your Grain Drum 14 Sconce are three watt 5 watt LED bulb depending on fixture size.


The bulbs are warm white (2700K) G16.5s and each delivers 450 lumens.

The bulbs are JA8 certified and have a 15,000 hr lifetime.

G16.5 bulb recommended. 10W Max

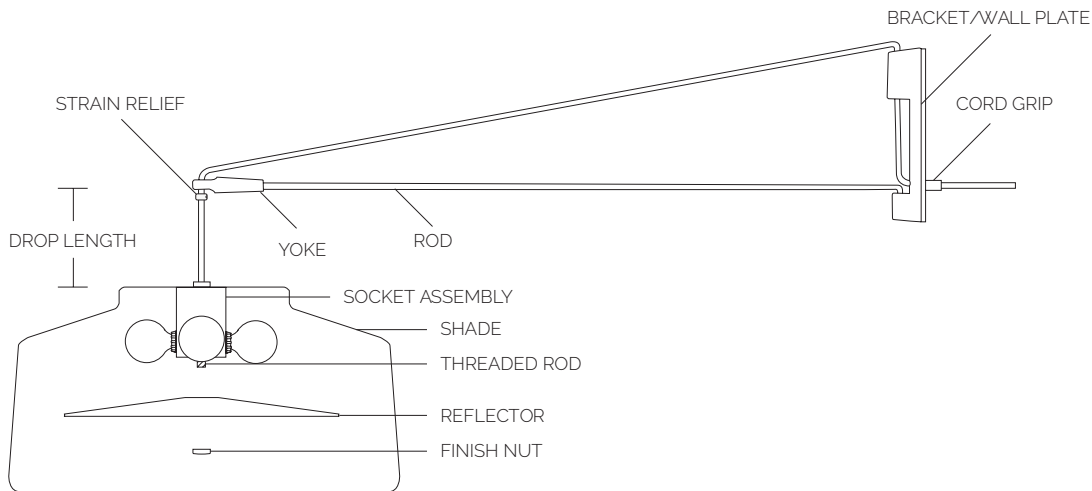

1. Determine desired drop length between Yoke and top of Shade, then attach Strain Relief to determined spot on Cord by tightening the set screw. Pull Cord through Yoke until Strain Relief sits flush inside of Yoke.
2. Pull Cord through top hole in Bracket, then down through side hole so that Cord exits Wall Plate.
3. Secure Rod into hole in Bracket. Pull Cord through back of Wall Plate until wire is taught but not strained. Slide Cord Grip over end of Cord until it sits flush with Wall Plate and secure by tightening set screw.
4. Connect Cord to Power Supply with Wire Nuts. Tuck excess Cord into Junction Box.
5. Thread Mounting Screws through Wall Plate into Junction Box/Mud Ring. Tighten Mounting Screws so that Wall Plate sits flush with wall.
6. Insert Light Bulbs into Socket Assembly. Attach Reflector to the threaded rod portion of the Socket Assembly with the Finish Nut.

 **CAUTION:** Before starting, turn off power at main circuit power.

