


# RAVENHILL STUDIO

2122 Cypress Ave, Los Angeles, CA 90065  
323.977.8532, contact@ravenhillstudio.com

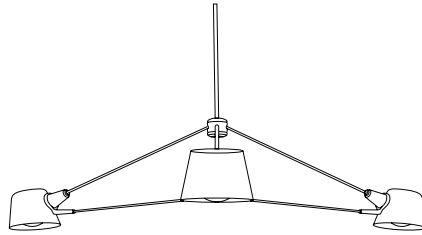

We recommend installation of our Pivot 3 Arm Pendant by a professional.

Please share this guide with your electrician. Read instructions completely before beginning assembly, and consider having a friend nearby in case you need an extra set of hands.

Your Pivot 3 Arm Pendant consists of **(6)** individual parts:

**(1) Pivot 3 Arm Pendant**

**(1) Centering Block**

**(1) Canopy Assembly**

**(3) Light Bulbs**

Included with your Pivot Pendant are three LED 7 watt light bulbs.

The bulbs are warm white (2700K) G25s and each delivers 800 lumens.

The bulbs are JA8 certified and have a 15,000 hr lifetime.

G25 bulb recommended.  
60W Max

The Pivot 3 Arm Pendant is a tensegrity structure that stays together with a minimum of parts. Each element is working to its fullest, so assembly takes a little extra attention and care. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.



*NOTE: Assembly of the fixture can be done BEFORE or AFTER installing it to your power source (see: CANOPY INSTALLATION INSTRUCTIONS), though we recommend assembly after it has been connected and suspended from the ceiling. We also recommend leaving the packaging on fixture for protection during assembly.*


1. Arrange arms around the central wire hub and straighten out any twists in the cords. (The wire has a flat profile that should run straight to the socket.)

If using a rigid ceiling mount connection, attach steel tube to brass wire hub now by threading them together.

2. Locate the Centering Block, noting which side is marked 'TOP' (that side up.) Insert the rods into the holes of the Centering Block, one at a time, while securely holding the Block between your thumb and forefinger. The last arm will be slightly more difficult to insert as the tension increases.


Note: The holes are drilled at a 4 degree angle. When the Centering Block is oriented correctly, the arms of the Pendant should slope downward at a slight angle.

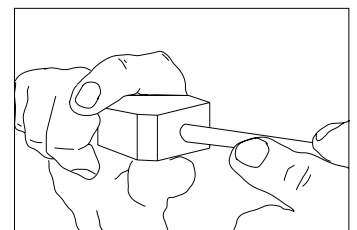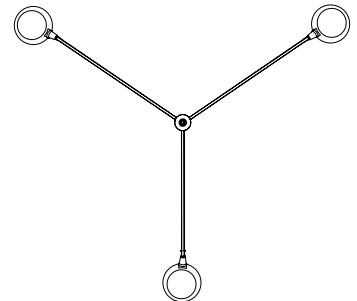


 **CAUTION: Before starting, turn off power at main circuit power.**

3. When all of the rods have been inserted, straighten the collar that holds the shade by grasping the collar and gently twisting the rod inside the block.

Once the collars have been adjusted, the metal shades can also be adjusted to desired orientation. They are designed to rotate 180° in either direction. Adjust the shades by holding the collar with one hand, lifting the arm out of tension, and spinning the shade within the collar with your free hand.

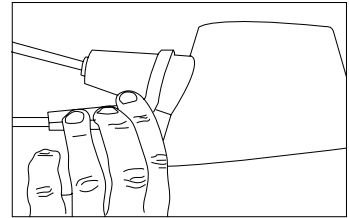

4. If you haven't already done so, disconnect power source and connect fixture to the ceiling junction box. (see: CANOPY INSTALLATION INSTRUCTIONS). Insert light bulbs and enjoy.

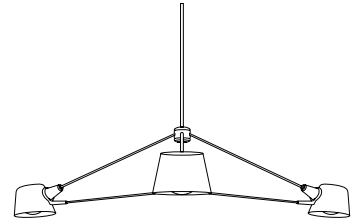

## TROUBLE SHOOTING

### I REMOVED THE STICKER ON THE CENTERING BLOCK AND I DON'T KNOW WHICH END IS UP

The holes are drilled at a 4 degree angle. When the rods are inserted, they should slope away downward from the Centering Block. If these rods have an upward slope when inserted, the Block is upside down. Flip the centering block right-side-up, and repeat installation.

### IT'S DIFFICULT TO PUT THE RODS IN THE CENTERING BLOCK

A tight, tensioned fit is normal – this creates a rigid structure when complete. Make sure that all the rods have bottomed out in the holes and that you are inserting the rods at the correct angle. If still having trouble, apply a drop of WD40 on the tip of the rod to ease installation.